M11 Pro Complete User Manual



Foreword:

Thank you for purchasing FiiO's high resolution lossless music player M11 Pro. To help you better utilize the M11 Pro to enjoy high-quality music, we have prepared this complete user manual. We hope this manual could help you get to know the M11 Pro and unleash its full potential.

Contents

●Introdu		-
	s and ports introduced······	
1,	Pictorial guide to buttons and ports·····	4
2,	Buttons and ports explained	6
●Main in	nterface and drop-down display	
	interface · · · · · · · · · · · · · · · · · · ·	
	WiFi	
•	Bluetooth·····	
2. 1	Using M11 Pro as a Bluetooth transmitter:	
	Using M11 Pro as a Bluetooth receiver	19
2	Audio	
3,	Multifunctional Output·····	
	SPDIF Coaxial output:	
	Gain	
	Digital filter mode	
	Wireless playback quality	
	USB mode	
	Channel balance·····	
	In-line remote	
	ALL to DSD····	
	Adjustable volume at LO: on/off·····	17
	AirPlay	
4,	General····	
	Operation method·····	
	Gesture control introduction	
	Power-off timers	
	Lock key settings	22
	Maximum volume settings Fixed volume settings	22
	Double click to wake up	9s
_		
5,	Display Sleep Sleep	
	Font size	
	Display size	
	Language settings	
	Backup & reset	
●Firmw	are update	27
Status	bar	20


Technical support	29
◆FiiO Music	30
1. Homepage	
2. Quickly locate all the songs	31
3. Functionalities corresponding to "all-songs" interface	32
4. Now playing interface	33
5. Professional Equalizer	3F

Introduction

The M11 Pro is a high fidelity, high resolution digital audio player, featuring Samsung 14nm Exynos 7872, dual AK4497EQ DACs, THX AAA-78 balanced amplifier architecture, 3GB RAM, 64GB internal storage as well as external storage via its micro SD slot (theoretically supporting up to 2TB). The digital audio player is equipped with a 5.15-inch 18: 9 HD display, running on a deep customized Android 7.0, coupled with an in-house developed professional music playback APP, "FiiO Music". The result is an implementation which is responsive and simple to operate. It supports PO / LO / BAL (both 2.5mm and 4.4mm) / SPDIF outputs and also supports USB Audio / USB DAC / Bluetooth receiver functionalities. In the area of Wireless, The M11 Pro not only supports dual-band WiFi and Bluetooth 4.2 protocol but also supports an array of high-quality Bluetooth codecs not limited to aptX, aptX-HD, LDAC and HWA (LHDC). One can play music continuously for at least 9.5 hours or let it go in deep sleep mode for 55 days allowing one to enjoy it any time.

Buttons and ports introduced

1. Pictorial guide to buttons and ports

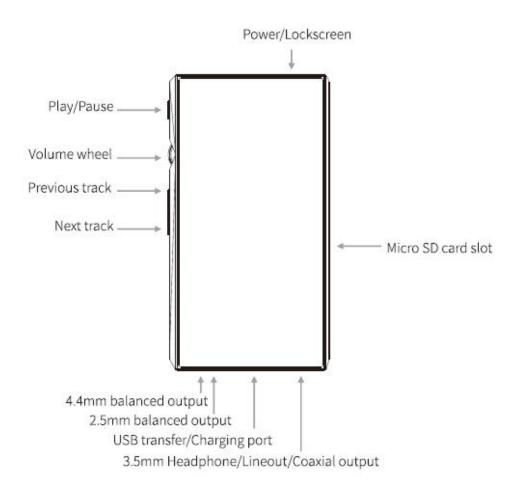

2. Buttons and ports explained

- 1) 5.15 inches IPS Hi-Res incell screen (1440x720 pixels): displays the user interface and other information; for operating the unit via screen touches in conjunction with buttons on the unit.
- 2) Power / Lock: While M11 Pro is powered off, holding for 2s to turn on; while powered on, hold to display power off / reboot menu; press briefly while powered on to turn screen on / off; hold the power button for 10 seconds to reset.
- 3) Play / Pause: press while playing to pause, press while paused to continue playback.
- 4) Volume knob: scroll up to turn up the volume, scroll down to turn down.
- **5) Previous track**: short press to play the previous track; long press to rewind the track quickly.
- **6) Next track**: short press to play the next track; long press to fast forward the track.
- 7) Micro SD card slot: supporting an external Micro SD card storage (theoretically up to 2T extension).
- **8) Type C USB data/ charging port**: used for charging, transmitting data, USB Audio output. The QC2.0 adapter is recommended for charging and can be filled in about 2 hours.
- **9) 4.4mm balanced headphone output**: supports 4.4mm TRRS balanced headphone.
- **10) 2.5mm balanced headphone output**: supports 2.5mm TRRRS balanced headphone.
- **11) 3.5mm PO/LO/SPDIF coaxial output**: shared phone/line/coaxial output port. Switch between the three outputs in M11 Pro Settings -> Audio Settings -> Multifunctional Output.

CTIA-spec headsets with in-line remote control supported with the

following remote control operation (single button remotes and main button of multi-button remotes supported):

Volume Up/Down: click to turn up/down the volume by one step, hold to turn up/down the volume continuously to Max volume/Mute;

Play / Pause: press main button once briefly to toggle between play and pause;

Next track: double-click main button quickly;


Previous track: triple-click main button quickly.

● Main interface and drop-down display








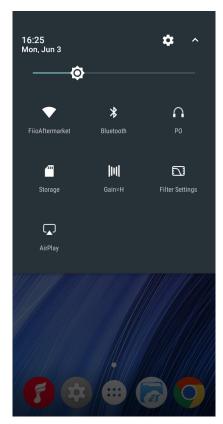

Setting interface

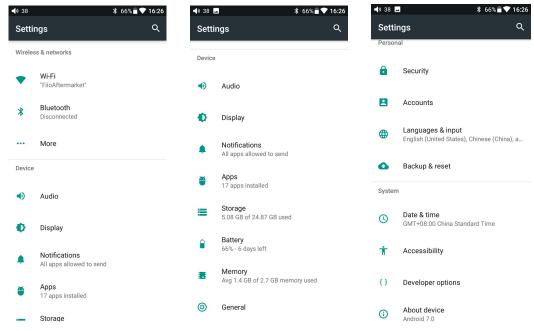


1. WiFi

The M11 Pro may connect to the Internet or other network resources to obtain music resources or perform other Android functions;

To connect the M11 Pro to WiFi devices / hotspots:

- 1) Tap the WLAN in setting as shown in the picture below;
- 2) Slide the WiFi switch to the right (ON) and the M11 Pro will automatically search for and display available WiFi connections;
- 3) Tap the name of the WiFi network you wish to connect to and enter the password if prompted, then the M11 Pro will connect to the network:

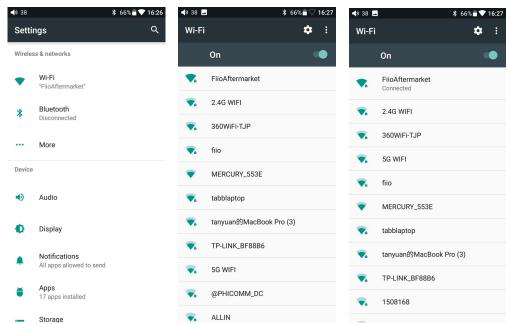

2. Bluetooth

M11 Pro 蓝牙支持多种编码方式,且支持发射或接收,方便用户通过无线连接拓展 M11


Pro 功能。

M11 Pro supports multiple Bluetooth codecs and supports both transmission and receiving, which is convenient for users to expand M11 Pro functions through wireless connection.

Using M11 Pro as a Bluetooth transmitter:


To use the M11 Pro with new Bluetooth devices (e.g. Bluetooth earphones, speakers, remote controls), the M11 Pro must first be paired with the device as follows:

- 1) Tap the Bluetooth in setting as shown in the picture below;
- 2) If Bluetooth on the M11 Pro is off, turn it on by flicking the switch on the upper right to the "ON" position on the right;
- 3) Tap "SEARCH FOR DEVICES" at the bottom of the screen to have the M11 Pro searched for and displayed nearby Bluetooth devices;
- 4) Tap the name of your Bluetooth device to pair with it. Successfully paired devices will appear under the "PAIRED DEVICES" list.

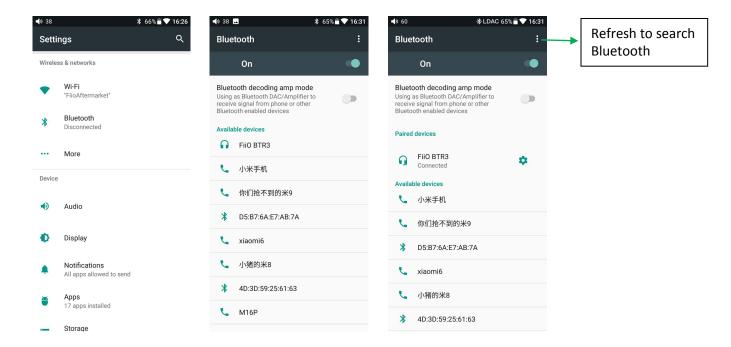

Before you connect to Bluetooth, you can select the Bluetooth audio code which you want to use as follows:

- 1) Enter the Settings-Audio settings interface;
- 2) Click on the Wireless Play, select the one you want to use, then disconnect the current connection and connect with your Bluetooth device again.

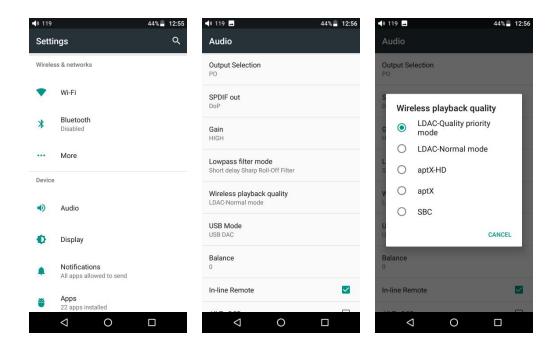

Note:


1. If you have already connected one Bluetooth device, it is necessary to disconnect


the Bluetooth connection in order to switch the Bluetooth audio code successfully before reconnecting with the Bluetooth device. (The switching between the three modes of LDAC can work in real time.)

2. When you turn on the Bluetooth, M11Pro will automatically connect to the latest available device.

Using M11 Pro as a Bluetooth receiver

When M11 Pro is connected to the new Bluetooth device (such as the mobile phone) as a Bluetooth receiver, turn on the "Bluetooth decoding mode" in the Bluetooth settings interface, then the Bluetooth will turned off automatically. Turn on the Bluetooth again and you are in Bluetooth receive mode now.

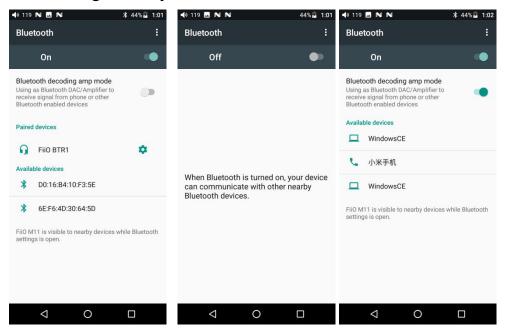


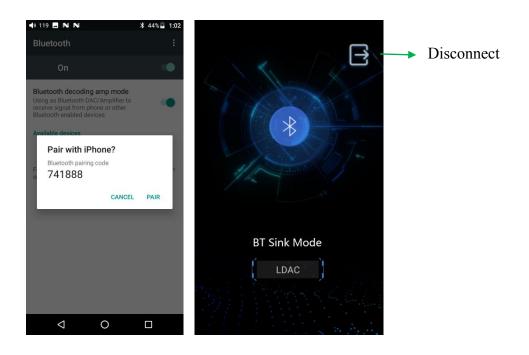

3. Audio

Multifunctional Output


Switch the output in PO/LO/SPIDIF Coaxial

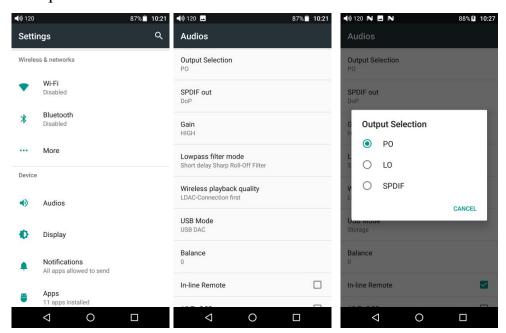

SPDIF Coaxial output:


You can choose between DOP and D2p modes. In D2P mode, DSD will Converted

to PCM output. In DOP mode, it will original output what you input (The amplifier should support DSD or there will be noise when you play DSD in DOP mode)

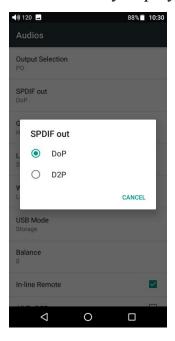

Gain


Sets the gain level of the headphone output to be either High (high volume) or Low (low volume).

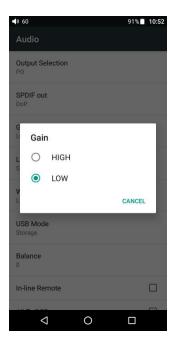

Digital filter mode


To set the filter modes: Sharp Roll-Off Filter, Slow Roll-Off Filter, Short delay

Sharp Roll-Off Filter, Short delay Slow Roll-Off Filter, Super Slow Roll-Off Filter.

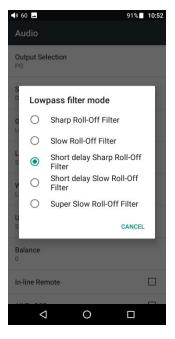

Wireless playback quality

When the Bluetooth receiver supports multiple Bluetooth audio encodes (such as BTR3), you can select which you want to use.

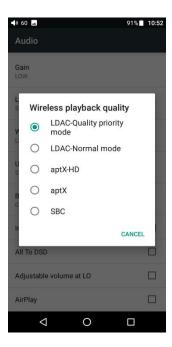


USB mode

Storage and USB DAC mode are provided. If the system of your computer is Windows, please download USB DAC driver on our website and follow relevant


instructions to install and use M11 Pro as an USB DAC. MAC computer do not need the driver.

Download Link: https://www.fiio.com/Driver Download

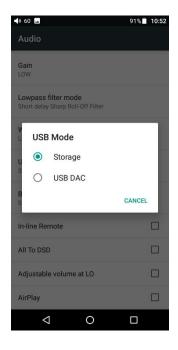


Channel balance

Set the volume balance between the left and right channels. From being biased leftmost (L10) through the centre (0) to rightmost (R10), there are 21 settings available.

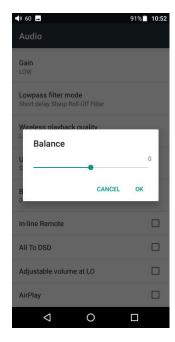


In-line remote

Response to in-line remotes on connected headsets may be enabled or disabled by your choice.

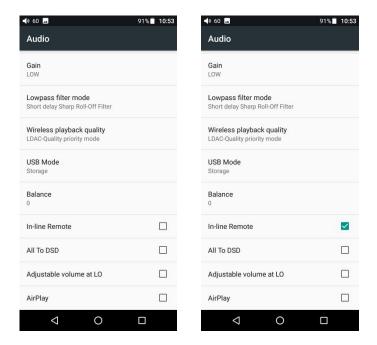


ALL to DSD

In ALL to DSD mode, PCM will be converted to DSD64 output.

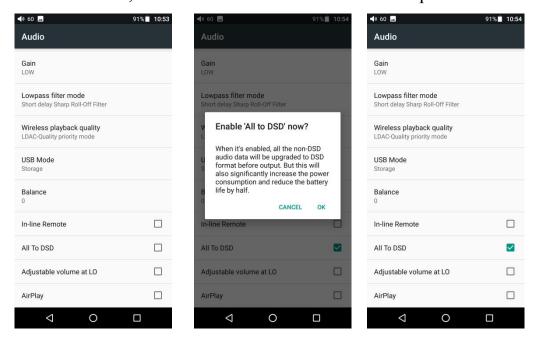


Adjustable volume at LO: on/off

This allows you to set whether the volume through Line Out, it can be controlled by adjusting the volume level or not.

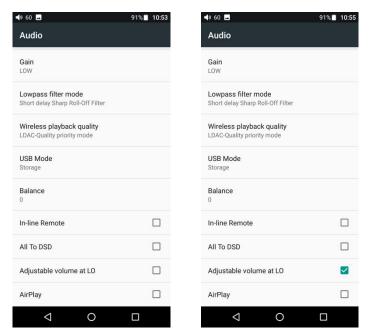

AirPlay

1) Connect to the same WiFi

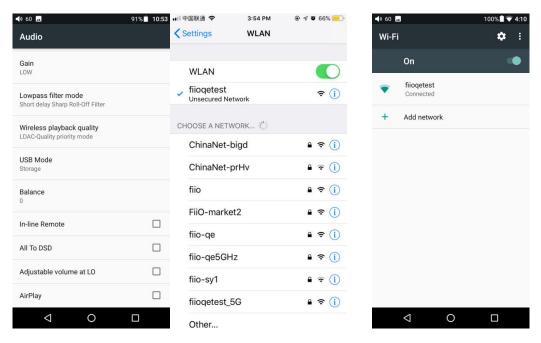

2) Click AirPlay on M11 Pro






3) Click the device AirPlay button, and then choose FiiO Music Player to connect.



4) Playing music on your device, you can listen on M11 PRO.


4. General

General includes Navigation control, Power-off timers, Key-lock settings, Maximum volume settings, Fixed volume settings, Double click to wakeup. Here are a few common functions' introductions.

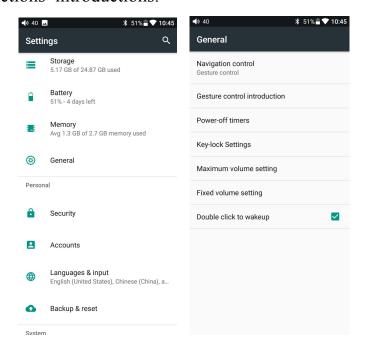



Operation method

There are two operation modes: "gesture operation" and "virtual key". Choose the right way to operate according to your habits.

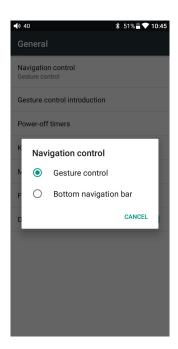

Gesture control introduction

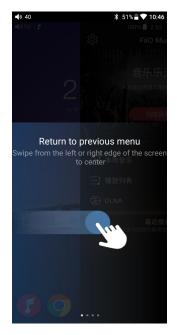

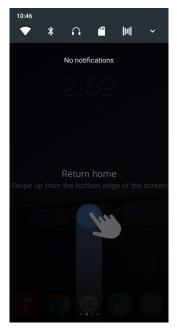






Power-off timers

Power-off timers includes "Idle poweroff" and "Sleep":

Sleep: the device will automatically shut down when the time reaches to the setting value. This time can be set to any integer value between 0 and 120 minutes. Note that when the setting is OFF, the sleep function is off.


Idle poweroff: When the device is not operated, the time reaches to the set value and the device will automatically turn off. The time of "Idle poweroff" can be set to any integer value between 0 and 50 minutes. Note that when the setting is OFF, this

function is off.

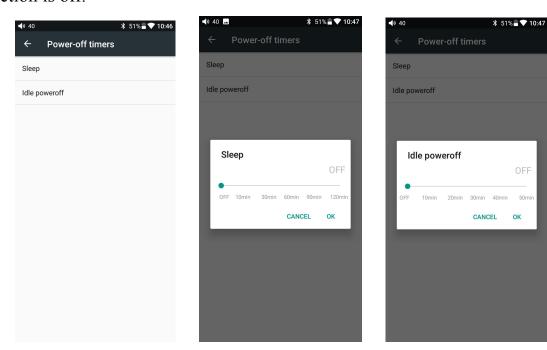


Lock key settings

You can choose whether the button will take effect when the screen is locked.

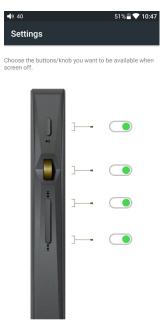


Maximum volume settings

Prevent the volume from suddenly increasing due to misoperation. Please set the appropriate maximum volume before listening to help protect your hearing.

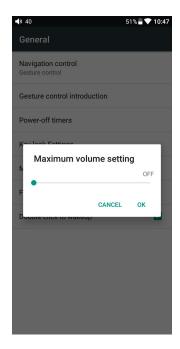


Fixed volume settings

The default boot volume is 60; you can set the appropriate boot volume.

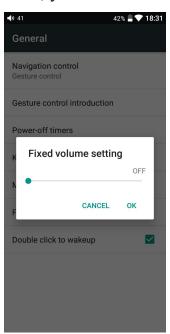

Double click to wake up

When "Double-click wake-up" is checked, after the display screen is locked, double-click the screen to wake up the display.

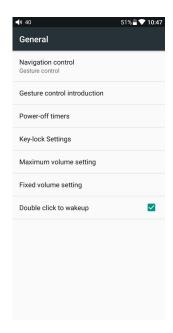


5. Display

Display includes brightness, wallpaper, hibernation, screen saver, font size, display size. The following is a detailed description of several common function items.


Sleep

Set the time to go to sleep when there is no operation. After the machine enters sleep for ten minutes, it enters low power mode. You can short press the "Power/Lock Screen" button to wake it up.

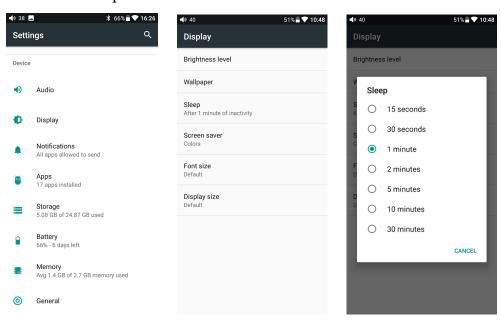


Font size

You can choose the appropriate font display, including small, default, large, and maximum four fonts.

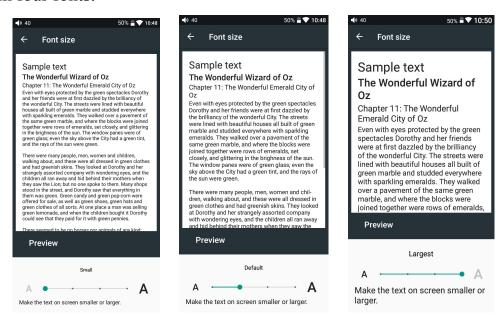

Display size


You can choose from three levels of display size, including small, default, and large. Display size is reflected both in the display icon and text.

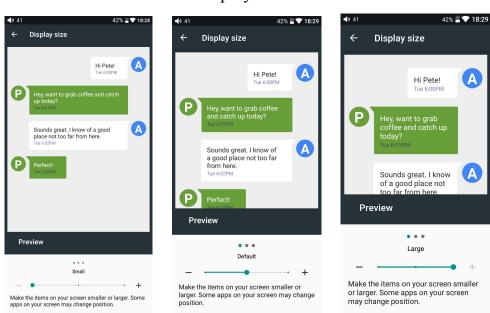

6. Language settings

- 1. Press "setting", "language & input", and "languages" in sequence, which will bring you to the "language preference setting" interface;
 - 2. Press "Add a language";

- 3. Select a language;
- 4. After selecting the language, you should press the "=" icon on the right side of the target language and drag the language to the head of the list. The switching of language can only be completed after this operation.

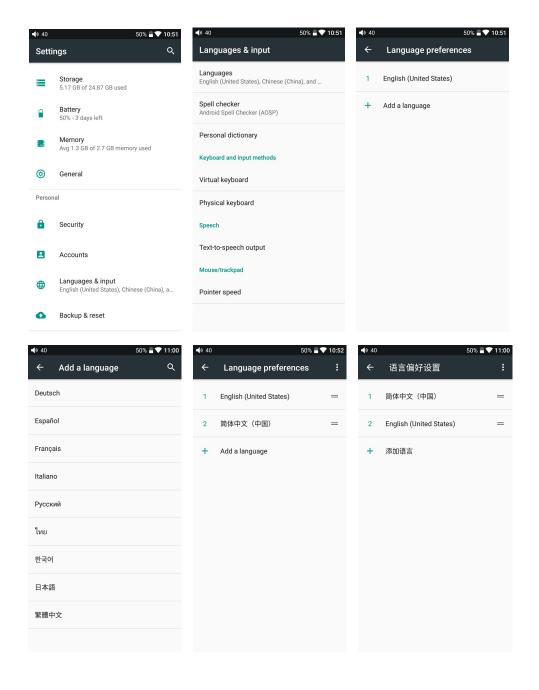


7. Backup & reset

"Network settings reset" will reset all network settings, including WiFi and

Bluetooth.

"Factory data reset" will erase all data from your internal storage and restore to the original default settings. Please backup important files in advance.

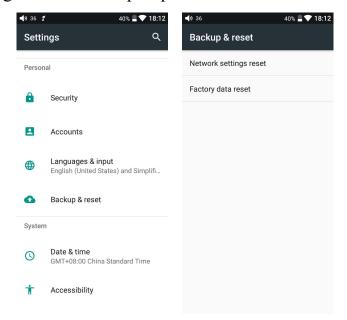


Firmware update

You can select OTA update or local update.

OTA update requires a stable connection to Wi-Fi, and once you press the "check update" button, M11 Pro will automatically look for new versions online. If a new version is available, it will notify you of the new version, and then the update can be performed accordingly.


For local update, the following steps need to be followed:

- 1) Download the firmware from FiiO official website, such as "M11 Pro-ota-1.0.3.zip", and copy this firmware file to Micro SD. Note that the file should not be unzipped, and you are recommended not to modify the file name.
- 2) Press "technical support > local update" accordingly, locating the firmware file in the "local update" interface, on the main interface, press the firmware file.

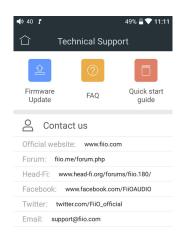




Check for updates

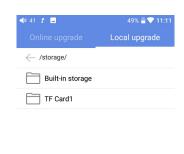



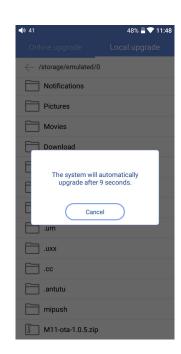

- 3) Please wait patiently after clicking, M11 Pro will start the firmware update automatically.
- 4) Upon completion of firmware update, M11 Pro will restart itself automatically. It can be used normally after restarting.


Note:

- 1) Please ensure the battery power is sufficient before updating (full power will be the best), otherwise the update may fail.
 - 2) If the update fails, please check whether the correct updating firmware is used.

3) Do not manipulate M11 Pro during updating.

Status bar

The status bar at the top of screen shows all kinds of status information about M11 Pro

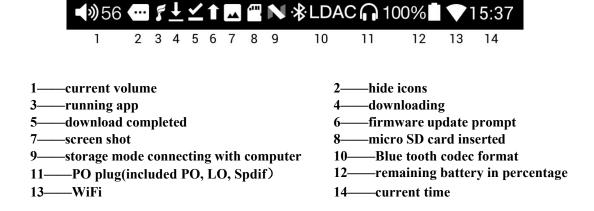

Technical support

Click the "technical support" icon in the main interface to enter the technical support interface, which includes our contact information and the following functionalities:

- 1. Firmware update: you can choose from online update or browsing local firmware update
- 2. FAQ: some frequently asked questions are listed with corresponding solutions given
- 3. Quick start: click to read a quick guide book to M11 Pro




•FiiO Music


M11 Pro embeds FiiO Music, a professional audio playback software, specifically designed for Android open-source system and specially built for flagship-level music players. Main functionalities of it are introduced with graphics below.

1. Homepage

FiiO Music will enter the homepage when started, as shown below:

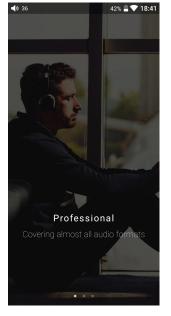



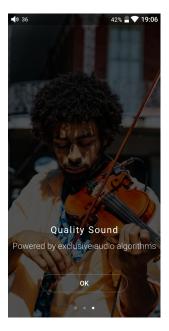


Setting icon: press the icon to enter the setting page;

Playing interface: press the icon to enter the playing interface;


Recently played: a list of recently played songs is presented chronologically;


Frequently played: a list of songs is presented according to frequency of playing;


Recently added: a list of recently added songs is presented chronologically;

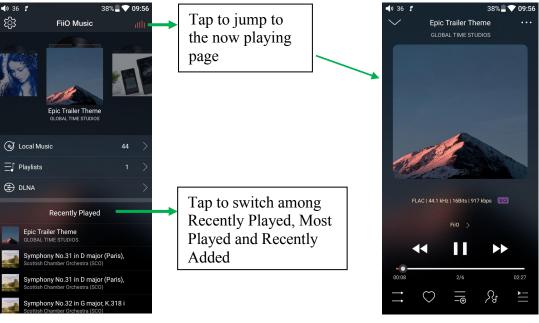

Settings

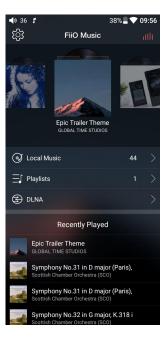

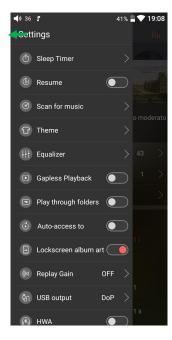

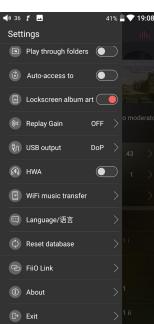


2. Quickly locate all the songs

Slide on the letter bar at the right side of the screen, and the corresponding initial letter will appear at the screen center. Release your finger at the corresponding initial letter, and the list will jump to the songs corresponding to that initial letter.



3. Functionalities corresponding to "all-songs" interface

Click the icon (!) at the right of each song to see the hidden menu. Click the icons in the menu to execute corresponding functionality.

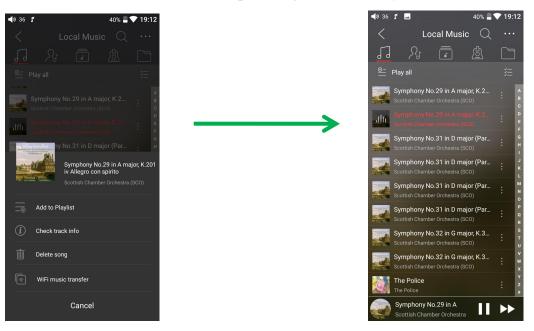


The following functionalities can be done in the hidden menu:


1. Select sorting method: sort according to file name, adding time, or initial letters

alphabetically.

2. **Bulk management**: batch play, song transfer through Wi-Fi, adds to My Favorites as a group, add to Playlist as a group, delete as a group, and exit batch management.

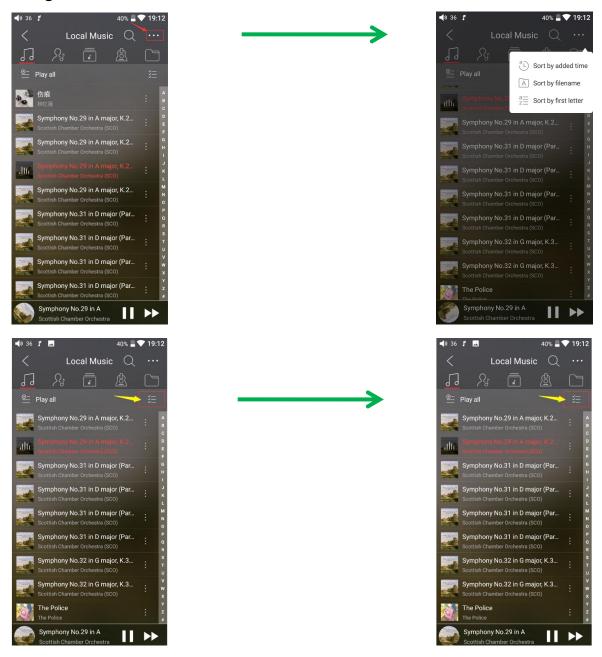

4. Now playing interface

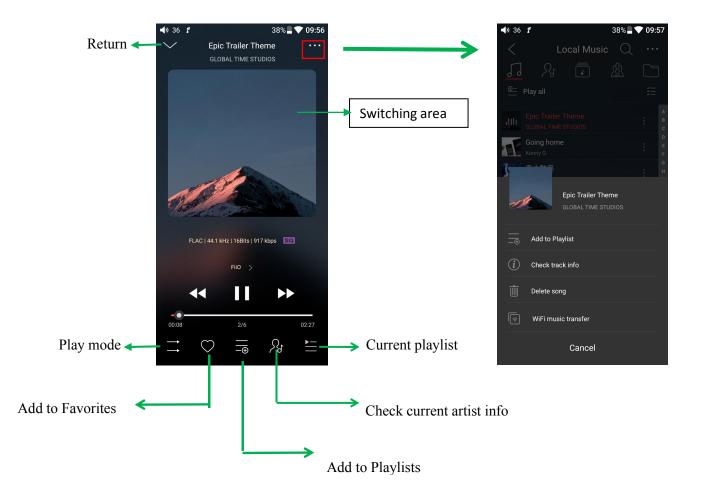



Switching area: clicking on the center area of album cover enables you to switch between album cover and lyrics; sliding to the left or right enables you to switch between songs.

Adjusting the volume: after rolling the volume roller, press the right side to jump out of the volume popup; the volume popup will be hidden after 2-second vacant time or pressing other areas.

Slide to fast forward/rewind: tap anywhere on the progress bar below the album cover area to jump to the corresponding part of the track now playing.

Note: While in the lyrics display page, you can adjust the playback progress by sliding over the lyrics, adjust lyrics timeline or adjust font size.

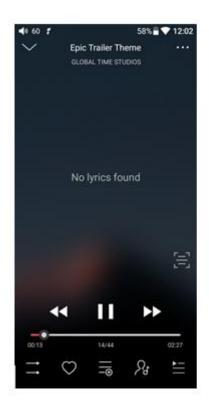

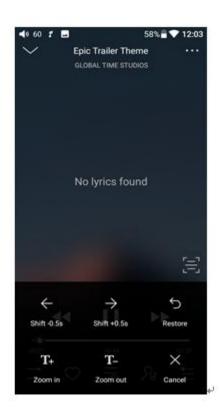

5. Professional Equalizer

FiiO Music incorporates a graphic equalizer. One may choose between the given genre presets directly, or adjust the ten frequency bands from 20 to 20000Hz independently from -12 to +12 dB, thus satisfying your personalized listening needs and adapting to your listening equipment.

- 1) **Choose preset EQ**: swipe up from the bottom of the screen to show the full list of EQ presets, tap icon to switch the equalizer you chose.
- 2) **自定义 EQ**: 切换到自定义 EQ 后上下拖动相应频点图标对 EQ 曲线进行微调(在频点区域左右滑动换页);依次更改想要调节的频点,EQ 实时生效;

- 2) **Customize EQ**: after switching to the customized EQ, drag the corresponding frequency icon up and down to slightly adjust the EQ curve (swipe left or right to change pages in the frequency point area); change the frequency points you want to adjust in turn, and EQ takes effect simultaneously;
 - 3) **Reset EQ**: Tap the reset button at the upper right corner to reset the present EQ preset to its genre default.

Note: if a factory reset is performed on the M11 Pro, all EQ settings will be reset to defaults.

